


REFERENCE

ATTACHMENT OF KEYS TO SMART KEYS

If you ordered the tamper proof Smart keys it will come in two pieces, the Smart key and the Steel Ring. Once you have completed the New Key Worksheet it is time to attach your keys to the smartkey. Follow the steps below:



- 1) Place the key(s) onto the steel ring.
- 2) INSERT THE TAPERED END OF THE STEEL RING INTO THE BOTTOM OF THE SK30 AND PRESS IN UNTIL THE STEEL RING SNAPS IN PLACE. (SEE DIAGRAM ON RIGHT)

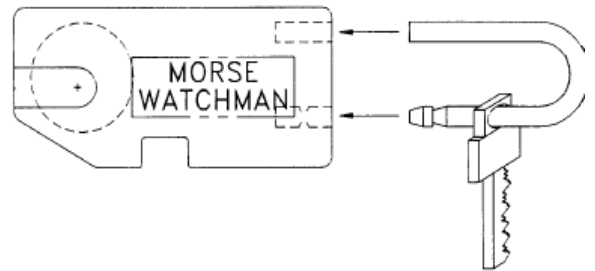

REPLACING KEYS ON SMART KEYS

To replace a key on a tamper-proof Smart key, follow the steps below.

- 1) Cut the bottom section of the keyring as close as possible to the smart key housing (See Figure 1).
- 2) Remove the old key and keyring, leaving the remainder of the old keyring in the smart key (See Figure 2).
- 3) Install the new key and keyring. When installing the new keyring, use the new keyring to push the remainder of the old keyring into the smart key housing (See Figure 3 and diagram on right). Do not use any objects other than the new keyring for this purpose.

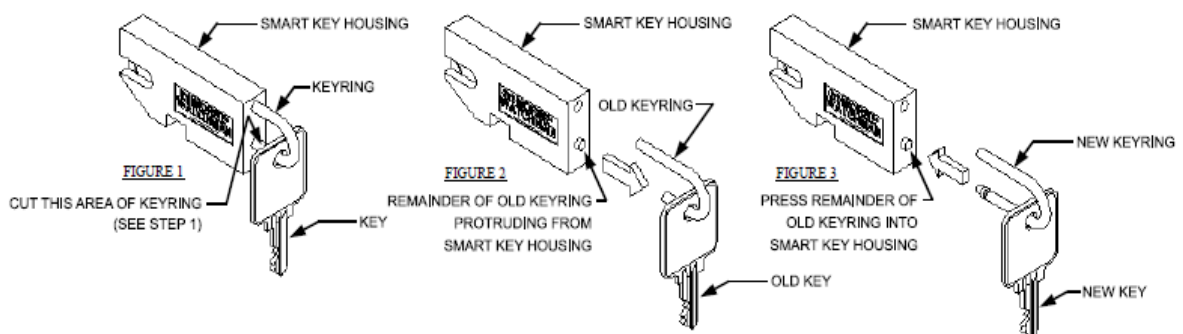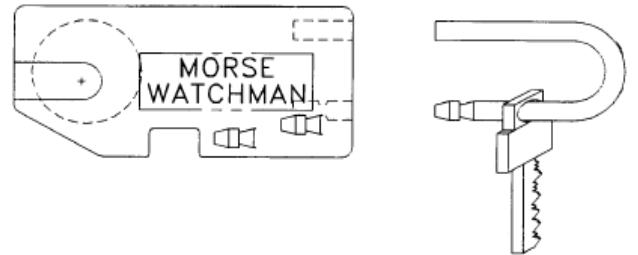

Note: This process may be repeated 3 times before the SmartKey will not be able to accept any more keyrings. At that time the Smart Key must be replaced or refurbished.